


# MISIR™

## Low Power HVAC Carbon Dioxide Sensor

MISIR is a low power (20mW), high performance CO<sub>2</sub> sensor. Based on GSS patented solid state IR sensor technology and innovative optical designs, MISIR is configured to meet the requirements of the HVAC and Demand LED Ventilation markets.

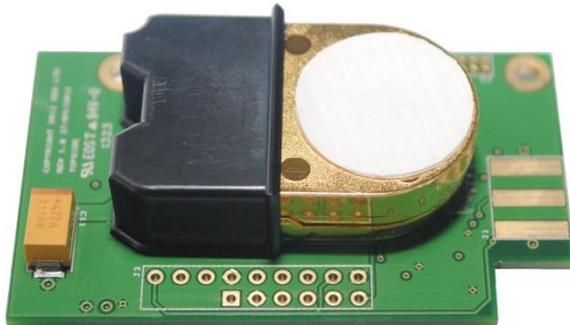

- Low Power 20mW
- Measurement ranges from 0 to 1%
- Low noise measurement (<10ppm)
- 3.3V to 5V supply
- Digital (UART) and Voltage Output Options
- Automatic calibration

### Specification


General Performance	
<b>Warm up time</b>	< 20 seconds
<b>Operating Conditions</b>	0°C to 50°C 0 to 95% RH, non-condensing
<b>Recommended Storage</b>	-30°C to +70°C
CO <sub>2</sub> Measurement	
<b>Sensing Method</b>	Non-dispersive infrared (NDIR) absorption Patented Gold-plated optics, GSS Solid-state source and detector
<b>Sampling Method</b>	Diffusion
<b>Measurement range</b>	0-2000ppm, 0-5000ppm, 0-1%
<b>Accuracy</b>	±50 ppm +/- 3% of reading <sup>1</sup>
<b>Non Linearity</b>	< 1% of FS
<b>Calibration</b>	Automatic Calibration
<b>Pressure Dependence</b>	0.13% of reading per mm Hg in normal atmospheric conditions
<b>Operating Pressure Range</b>	950 mbar to 1100 mbar <sup>2</sup>
<b>Response Time</b>	2 Minutes

## Electrical/Mechanical


**Power Input** 3.25 to 5.25V. (3.3V recommended).  
Peak Current 150mA<sup>3</sup>.  
Average Current 6mA<sup>3</sup>.

**Power Consumption** 20 mW<sup>3</sup>

## Dimensions and Wiring Connections

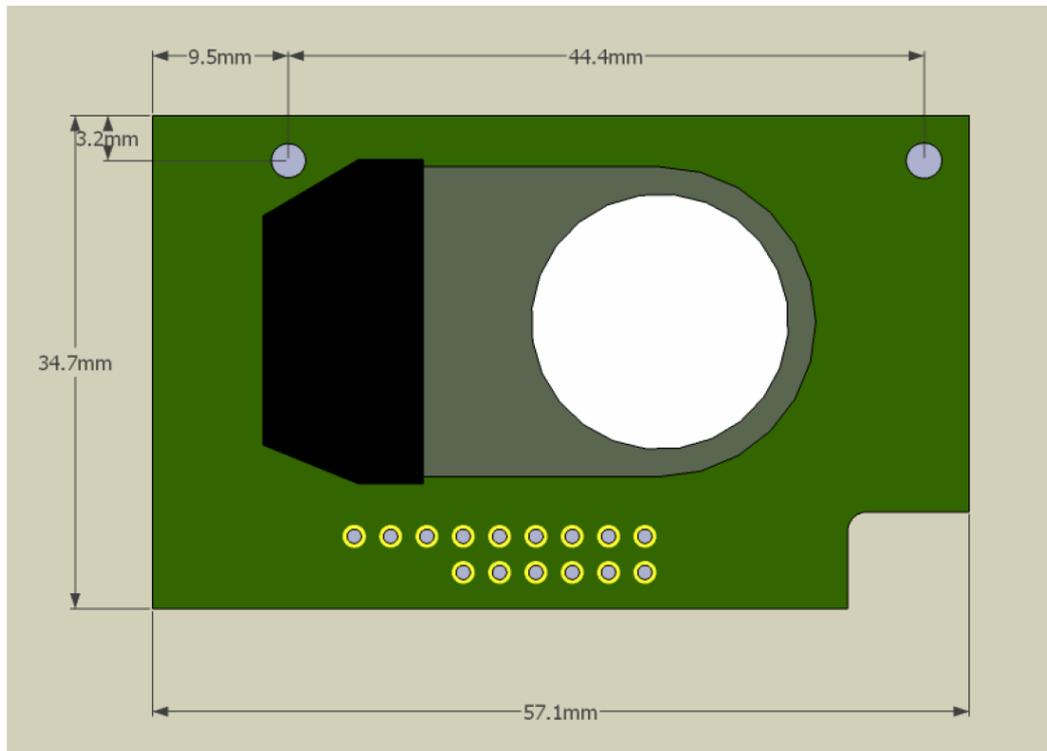

The total height is 15mm at the highest point.

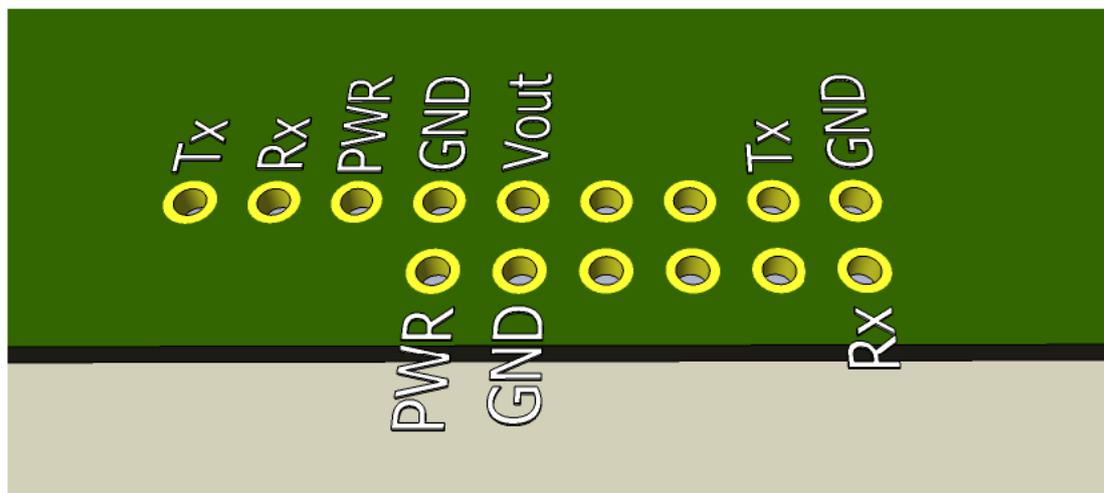

Pin	Description	Comment
PWR	Vsupply	3.3V to 5.25V
GND	0V	Only one GND should be connected
Rx	Sensor receive line (UART)	5V Tolerant
Tx	Sensor transmit line (UART)	Voh = Vsupply
Vout	Voltage output	Vout proportional to CO2 concentration. Full scale = Vsupply

**Note 1:** All measurements are at STP unless otherwise stated.

**Note 2:** External Pressure calibration required.

**Note 3:** Power measurements for standard CO2 sensor with 2 readings per second.

**Note 4:** Autocalibration is enabled by default on MISIR. For correct operation, the sensor must experience fresh air at some point during the autocalibration period. For details see the application note "COZIR \_ Autocalibration". For other options, refer to users guide.

This documentation is provided on an as-is basis and no warranty as to its suitability or accuracy for any particular purpose is either made or implied. Gas Sensing Solutions Ltd will not accept any claim for damages howsoever arising as a result of use or failure of this information. Your statutory rights are not affected. This information is not intended for use in any medical appliance, device or system in which the failure of the product might reasonably be expected to result in personal injury. This document provides preliminary information that may be subject to change without notice.